

Button configuration Zebra TC56

Konfiguration av knappar på TC56

System settings > Key Programmer:

- **SCAN:** BUTTON_L2
- **SCAN_R:** BUTTON_R2
- **VOLUME_DOWN:** VOLUMEDOWN
- **VOLUME_UP:** VOLUMEUP
- **LEFT_TRIGGER_2:** BUTTON_L1
- **REAR_BUTTON:** NONE



GroupTalk v3.2.19+ > Settings > Configuration buttons:

- **Button L1:** None (Scanner)
- **Button L2:** Push-To-Talk
- **Button R2:** Alarm
- **Primary button:** Push-To-Talk
- **Alarm button:** Alarm
- **FN button #1:** Repeat Message / Push-To-Talk / None (Lower left button on Aina)
- **FN button #2:** None
- **FN button #3:** None
- **FN button #4:** None
- **Next button:** Next Group
- **Previous button:** Previous Group

GroupTalk konfigurations file: (**provisioning.data**)

```
prefs_button_map_button_l1 function_none
prefs_button_map_button_l2 function_ptt
prefs_button_map_button_r2 function_alarm
prefs_button_map_primary function_ptt
prefs_button_map_alarm function_alarm
prefs_button_map_function_1 function_repeat_message
prefs_button_map_function_2 function_none
prefs_button_map_function_3 function_none
prefs_button_map_function_4 function_none
prefs_button_map_next function_next_group
prefs_button_map_previous function_previous_group
```

Provisioning with adb:

```
adb push provisioning.data /sdcard/Android/data/com.grouptalk.android/files/
```

GroupTalk needs to be restarted to activate new settings